

SCANcube IV

Standard Connector Positions and Pin-Outs



SCANcube IV 10

 


SCANcube IV 14

SL2-100 interface

SL2-100 / POWER IN

 
(25-pin female D-SUB connector)

DO NOT CONNECT (1)		(14) DO NOT CONNECT
DO NOT CONNECT (2)		(15) DO NOT CONNECT
DATA IN - (3)		(16) DATA IN+
DO NOT CONNECT (4)		(17) DO NOT CONNECT
DO NOT CONNECT (5)		(18) DO NOT CONNECT
DATA OUT - (6)		(19) DATA OUT+
DO NOT CONNECT (7)		(20) DO NOT CONNECT
DO NOT CONNECT (8)		(21) DO NOT CONNECT
+30 V (9)		(22) +30 V
+30 V (10)		(23) GND
GND (11)		(24) GND
DO NOT CONNECT (12)		(25) DO NOT CONNECT
DO NOT CONNECT (13)		

XY2-100 interface

DIGITAL POWER IN

(25-pin female D-SUB connector)

CLOCK - (1)		(14) CLOCK+
SYNC - (2)		(15) SYNC+
CHAN1 - (3)		(16) CHAN1+
CHAN2 - (4)		(17) CHAN2+
DO NOT CONNECT (5)		(18) DO NOT CONNECT
STATUS2 - (6)		(19) STATUS2+
DO NOT CONNECT (7)		(20) DO NOT CONNECT
STATUS1 - (8)		(21) STATUS1+
+30 V (9)		(22) +30 V
+30 V (10)		(23) GND
GND (11)		(24) GND
DO NOT CONNECT (12)		(25) DO NOT CONNECT
DO NOT CONNECT (13)		